



PART PLAN "A"

- NOTES:**
1. FOR THE INSTALLATION OF 15KV CABLES IN PULL AND TRANSITION CLOSETS, PROVIDE RACKS, BRACKETS, SUPPORTS, PORCELAIN SPOOL INSULATORS AND INSULATOR CLAMPS AS NECESSARY TO SECURE AND DRESS UP OF CABLES AT WALLS AND CEILING.
  2. PROVIDE HALF LAPPED LAYER OF ARC PROOFING TAPE TO COVER ENTIRE SECTION OF EXPOSED CABLES INSIDE THE PULL AND TRANSITION CLOSET AFTER INSTALLATION IS COMPLETED.
  3. ALL PROPOSED CONDUIT ROUTING SHALL BE SURVEYED AND SUBMITTED IN SHOP DRAWING FORM TO THE AUTHORITY FOR APPROVAL. NO INSTALLATION SHALL COMMENCE WITHOUT WRITTEN ACCEPTANCE.
  4. ALL ROUTING SHOW PROPOSED LOCATIONS OF CONDUITS. EXISTING BUILDING CONDITIONS AND ENCUMBRANCES MAY REQUIRE THE CONTRACTOR TO MAKE ADJUSTMENTS AND OFFSETS TO THE LOCATIONS OF CONDUITS AND PULL TRANSITION CLOSETS.
  5. PROVIDE FIRE PROOFING OF ALL CONDUIT INSTALLATION PASSING THROUGH FIRE RATED WALLS.
  6. WHERE EXISTING CONSTRUCTION MUST BE REMOVED FOR INSTALLATION OF WORK, REPAIR, PATCHING AND RELOCATION SHALL BE DONE IN AN APPROVED MANNER BY TRADESMAN SKILLED IN THE EXECUTION OF THE PARTICULAR TRADE.
  7. INSTALL ALL 15KV FEEDER CABLES FURNISHED BY THE AUTHORITY TO REQUIRED LOCATIONS AS SHOWN ON DRAWINGS. TERMINATE CABLES IN SWITCHGEAR AND CABINETS AS INDICATED.

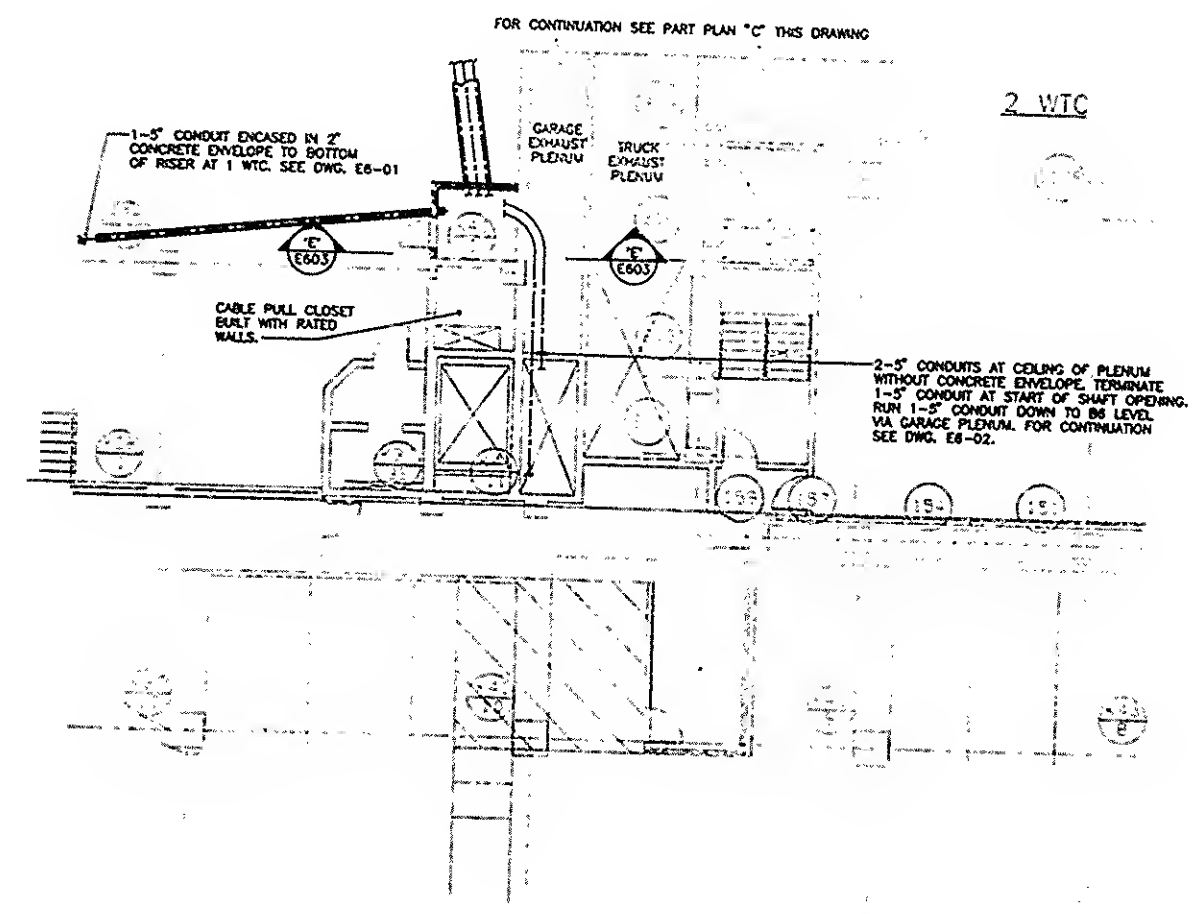

PART PLAN "D"

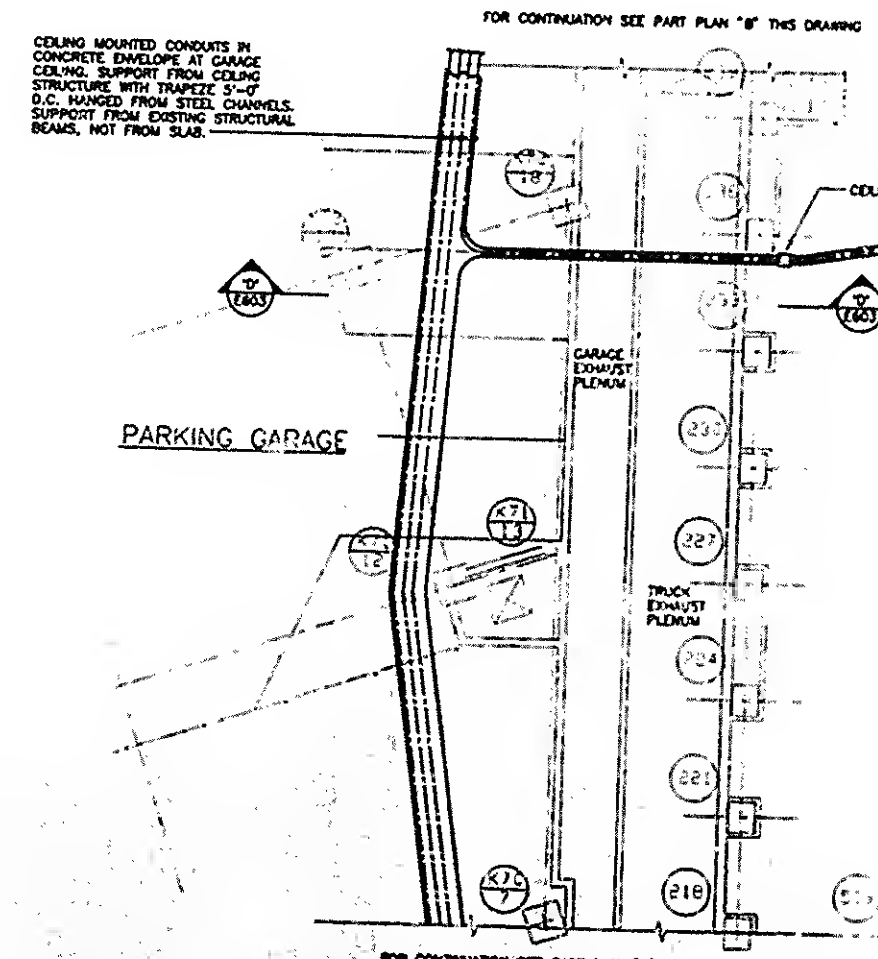

PART PLAN "C"